

Product Specification

Senseair Sunrise



Table of Contents

General	3
Description.....	4
Applications.....	4
Installation and Soldering.....	4
Sample Gas Diffusion Area	4
Pin Configuration and Functions.....	4
Pin Configuration	4
Pin Functions	5
Specifications.....	6
Absolute Maximum Ratings	6
Recommended Operating Conditions.....	7
Accuracy over complete operating range.....	8
Electrical Characteristics	9
Average current.....	10
Measurement Mode	11
Communication.....	11
Dimensions	11
Maintenance.....	11
Handling.....	11

General

Item	Senseair Sunrise Article No. 006-0-0008						
Target gas	Carbon dioxide (CO ₂)						
Operating principle	Non-dispersive infrared (NDIR)						
Operating range	0–50 °C, 0–85% RH (non-condensing), (see figure 4)						
Measurement range	0–10000ppm ¹						
Accuracy [CO ₂] ²	400–1500ppm	±(30ppm + 3% of reading) ^{3,4}					
	1501–2500ppm	±75ppm ³					
	2501–5000ppm	±(30ppm + 3% of reading) ^{3,4}					
Pressure dependence	1.6% reading per kPa deviation from normal pressure						
RMS noise, Typ. [CO ₂]	<u>Filtered:</u> 0.8ppm @ 400ppm, 25 °C 2ppm @ 3000ppm, 25 °C		<u>Unfiltered:</u> 9ppm @ 400ppm, 25 °C 24ppm @ 3000ppm, 25 °C				
Power supply	3.05–5.5V ⁵						
Peak current	< 125mA ⁶						
Steady state current during sampling	90mA						
Average current, typical	Table comparing continuous measurement mode and single measurement mode. ^{7,8}						
	Measurement period	2 samples		8 Samples		32 Samples	
		Continuous	Single	Continuous	Single	Continuous	Single
	16s	22µA		34µA			
	1 min	18µA	7µA	21µA	17µA	35µA	27µA
5 min	16µA	1µA	17µA	3µA	20µA	5µA	
Measurement setting	Default: Continuous measurement mode, 16s, 8 samples (adjustable by host) ⁷						
Dimensions (LxWxH)	33.5x19.7x11.5mm						
Life expectancy	> 15 years						
Storage temperature	-40–70 °C						
Weight	5g						
Communication interface	UART / I ² C						

Table 1 General Specifications

- Note 1: Sensor is designed to measure in the range 400–5000ppm, extended range is up to 10000ppm. Nevertheless, exposure to concentrations below 400ppm may result in incorrect operation of ABC algorithm and shall be avoided for configurations with ABC ON.
- Note 2: Accuracy in the table is defined at 25 °C, 1013 mbar ambient pressure and 50% RH. The accuracy of the complete operating range is specified in Figure 3.
- Note 3: Shipping, rough handling and assembly might temporarily affect the accuracy of the sensor. Accuracy can be fully restored by forced recalibration or after a maximum of 3 ABC periods.
- Note 4: Specification is referenced to uncertainty of calibration gas mixtures (±1%).
- Note 5: Unprotected against surges and reverse polarity.
- Note 6: At sampling start/stop there is a fast transient current. See “Sunrise customer integration guidelines” (TDE7318) for details.
- Note 7: See Measurement mode for detailed information.
- Note 8: nRDY output pin disabled. See Figure 5 Average current.

Description

Senseair Sunrise is a miniature sensor module for battery-powered applications. It gives full control over integration of sensor into a host system, flexibility in changing of CO₂ measurement period and power consumption.

Applications

Senseair Sunrise is designed for battery powered applications.

Installation and Soldering

Refer to Senseair Sunrise and Sunlight Handling manual (ANO4947).

Sample Gas Diffusion Area

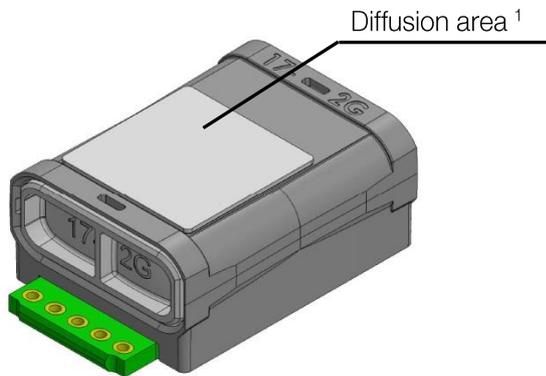


Figure 1 Sample Gas Diffusion Area

Note 1: Diffusion area must not be covered. Diminished sample gas circulation may affect response time.

Pin Configuration and Functions

Pin Configuration

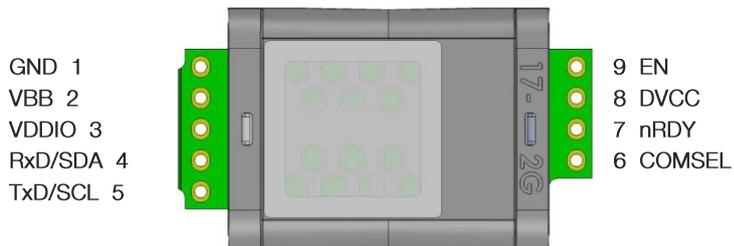


Figure 2 Pin Configuration (Top view)

Pin Functions

Pin #	Symbol	I/O Type	Description
1	GND	Power	Ground
2	VBB	Power	Sensor supply voltage
3	VDDIO	Power	I/O supply voltage for TXD/SCL and nRDY.
4	RxD/SDA	I/O	Sensor UART receive input / I ² C bidirectional serial data; True Open-Drain when operating as output.
5	TxD/SCL	I/O	Sensor UART transmit output / I ² C clock input; True Open-Drain when operating as output, 100k Ω internal Pull-Up to VDDIO.
6	COMSEL	Input	Communication select, valid at power-up: HIGH = UART (Default, internal Pull-Up, can be left floating); LOW = I ² C (Connect to GND).
7	nRDY	Output	Measurement ready output; True Open-Drain, active LOW; 1M Ω internal Pull-Up to VDDIO.
8	DVCC	Power	Internal supply voltage output. Not intended to supply external systems, leave floating if not used.
9	EN	Input	Enable (active high). Drive this pin over 1.2V to turn on the sensor. Drive this pin below 0.4V to put the sensor into shutdown mode. Do not leave floating. Connect to VBB if not used.

Table 2 Pin Functions

Specifications

Absolute Maximum Ratings

Over operating temperature range (unless otherwise noted); all voltages are with respect to GND ¹

Symbol	Description	Min	Max	Unit
Voltage				
VBB	Supply voltage	-0.3	6	V
EN	Enable			
VDDIO	I/O supply voltage			
RxD/SDA	UART / I ² C	-0.3	6.5 ²	V
TxD/SCL	UART / I ² C			
nRDY	Ready output	-0.3	6.5	V
DVCC	Internal supply voltage output	-0.3	VBB + 0.3 or 4.3 whichever is less	V
COMSEL	Communication select			
	EN = HIGH	-0.3	DVCC + 0.3	V
	EN = LOW	-0.3	0.3	
Current				
DVCC	Maximum output current	Internally limited		A
COMSEL, RxD/SDA, TxD/SCL	Instantaneous maximum current limit	15		mA

Table 3 Absolute Maximum Ratings

Note 1: Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only, which do not imply functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Conditions. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

Note 2: Do not input signals or an I/O pull-up power supply while the device is not powered (EN = LOW or VBB out of recommended operating condition). The current injection that results from input of such a signal or I/O pull-up might cause malfunction and the abnormal current that passes in the device at this time might cause degradation of internal elements.

Recommended Operating Conditions

Over operating temperature range (unless otherwise noted)

Symbol	Description	Min	Typ	Max	Unit	Test conditions
Voltage						
VBB	Supply voltage	3.05	3.3	5.5	V	
VDDIO	I/O supply voltage for TXD/SCL and nRDY.	0		5.5	V	
COMSEL	Communication select	0		DVCC	V	
EN	Enable	0		VBB	V	
RxD/SDA	UART / I ² C	0		VDDIO	V	
TxD/SCL	UART / I ² C	0		VDDIO	V	
Current						
I _{COMSEL} ¹	DC injection current	-2		2	mA	(V _{IN} <GND, V _{IN} >DVCC)
I _{DVCC} ^{1,2}	Internal supply voltage current	0		25	mA	

Table 4 Recommended Operating Conditions

Note 1: Limited to the value specified.

Note 2: Leave floating if unused.

Accuracy over complete operating range

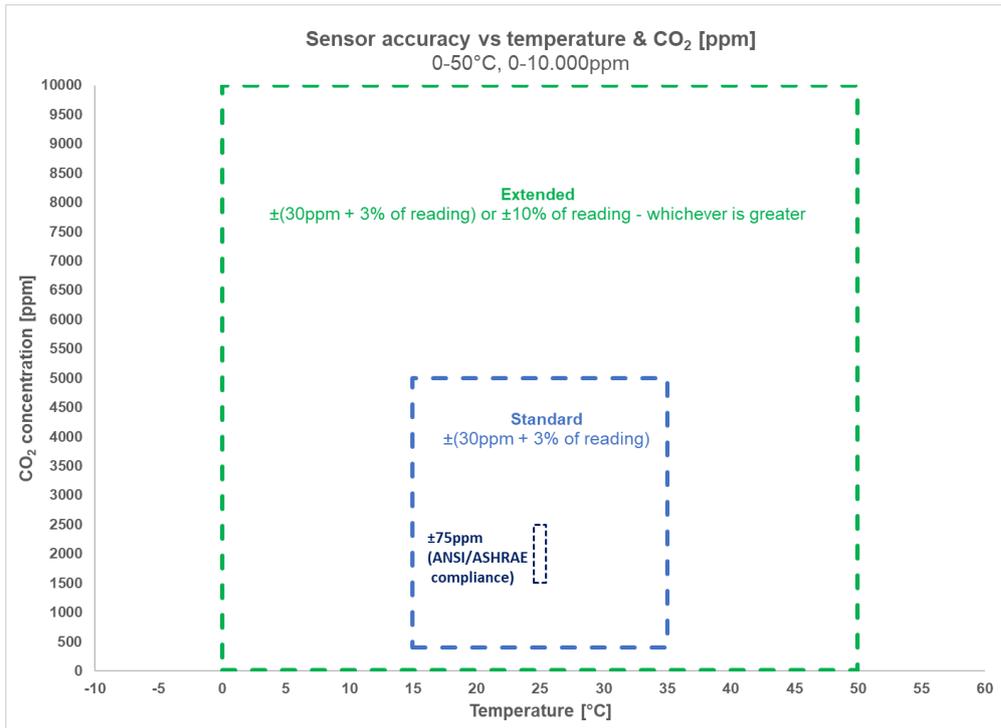


Figure 3 Accuracy over complete operating range (temperature and measurement range of CO₂)

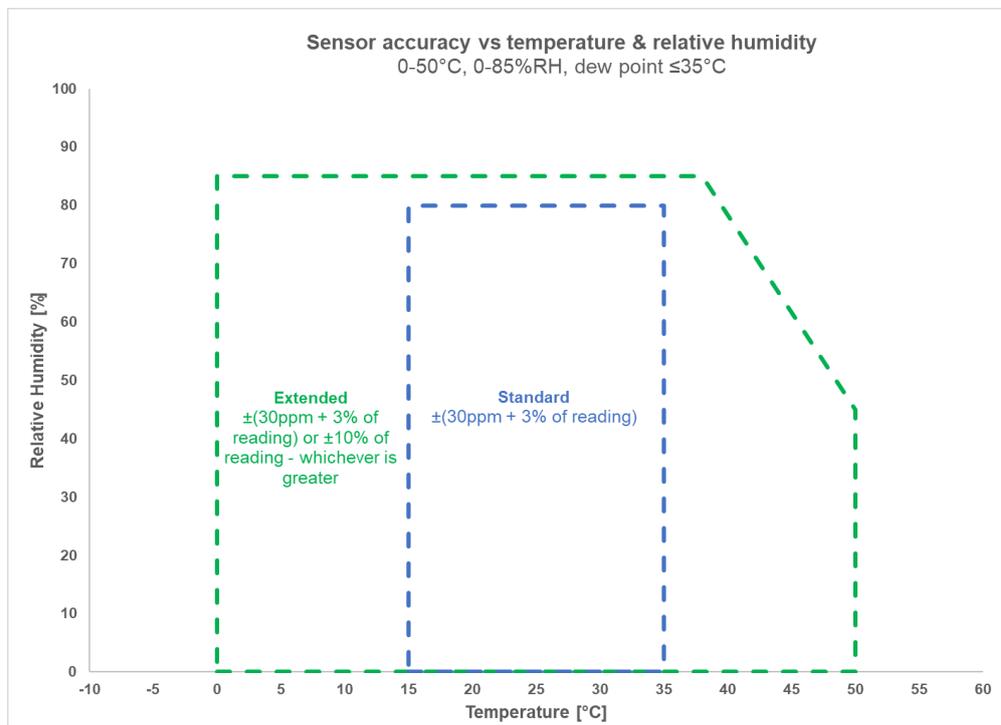


Figure 4 Accuracy over full operating range (temperature and relative humidity)

Electrical Characteristics

Over operating temperature range, $V_{EN} = V_{BB} = 3.3V$ and default settings:
Continuous mode, 16s measurement period, 8 samples, unless otherwise noted.

Symbol	Description	Min	Typ	Max	Unit
Voltage					
V_{DVCC}^1	Supply voltage output	2.70		2.91	V
V_{IH}	Input high voltage ²	COMSEL RxD (UART)	2.32		V
		SDA (I ² C) SCL (I ² C)	2.0		
		ENABLE	1.2		
V_{IL}	Input low voltage ²	COMSEL RxD (UART)		0.54	V
		SDA (I ² C) SCL (I ² C)		0.81	
		ENABLE		0.4	
V_{HYS}	Input hysteresis	COMSEL, RxD/SDA, TxD/SCL	270		mV
Current					
I_{VBB}	Operating peak current	$V_{EN} \geq 1.2V; 3.05 \leq V_{BB} \leq 5.5V$		125	mA
	Operating average current ³		34		μA
I_{VBB}	Supply quiescent current	$V_{EN} \leq 0.3V; 3.05 \leq V_{BB} \leq 5.5V$	0.2	1	μA
I_{EN}	Enable pin leakage current	$V_{EN} = V_{BB} = 5.5V$	5.5		μA
I_{DDIO}	I/O supply leakage current	$V_{DDIO} = 3.3V$	0.2	1.1	μA
I_{IN}	Input leakage current	$V_{DDIO} = 3.3V; RxD/SDA, TxD/SCL$	0.1	5	μA

Table 5 Electrical Characteristics, Typical values at $T_A = 25\text{ }^\circ C$.

- Note 1: Output is not intended to supply external systems, leave floating if unused.
 Note 2: Different voltage levels on pins RxD/SDA and TxD/SCL depending on if UART or I²C is used.
 Note 3: nRDY output pin disabled.

Average current

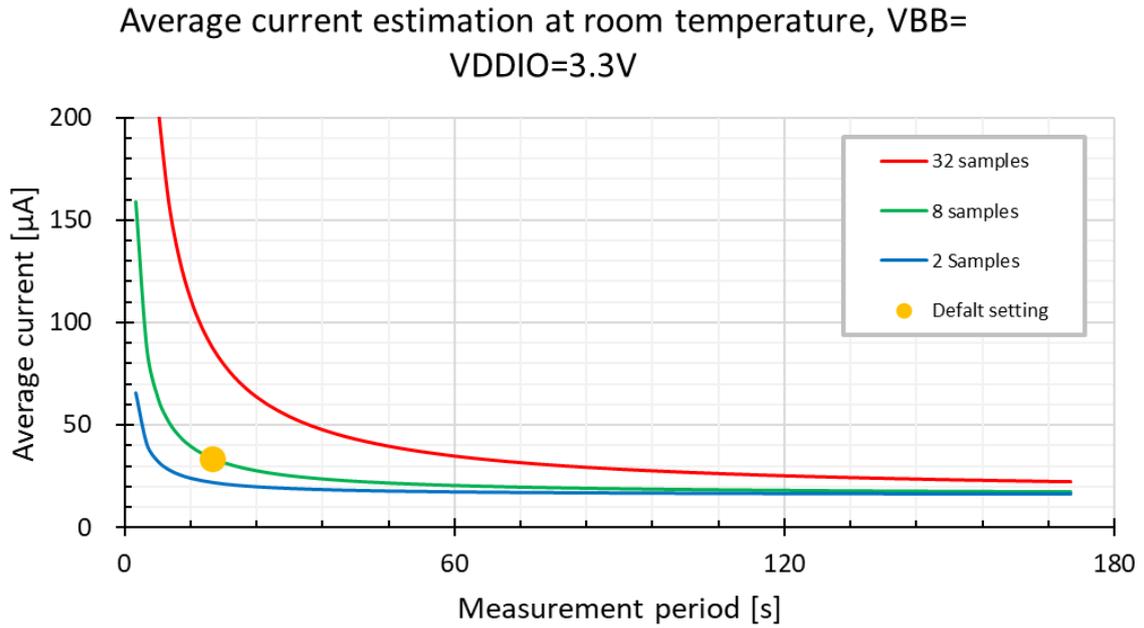


Figure 5 Average current

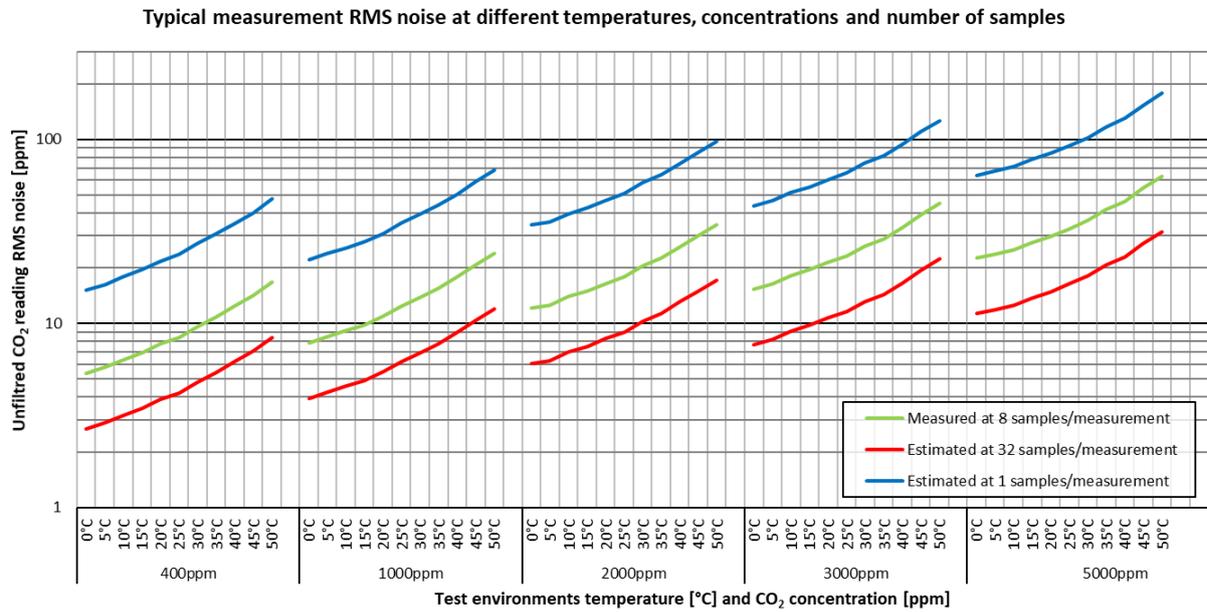


Figure 6 Measurement RMS noise

Measurement Mode

The Senseair Sunrise supports two modes of operation for measurement of CO₂ concentration: Continuous measurement mode and Single measurement mode. The default operation mode for Senseair Sunrise is Continuous measurement mode.

- 1) In Continuous measurement mode, the sensor measures at regular intervals (measurement period, default setting 16s). The host can read measurement data after each measurement and does not need to send any command to trigger measurements.
- 2) In Single measurement mode, the sensor waits for the hosts command to measure. The host needs to send a command sequence to trigger each measurement.

See "Sunrise customer integration guidelines" (TDE7318) for details.

Communication

Refer to "Modbus on Senseair Sunrise and Sunlight" (TDE5514) and "I2C on Senseair Sunrise and Sunlight" (TDE5531). See "Sunrise customer integration guidelines" (TDE7318) for details.

Dimensions

Refer to drawing 740-00993.

Maintenance

Senseair Sunrise has a built-in self-correcting ABC algorithm. ABC period is adjustable by host. Discuss your application with Senseair in order to get advice for a proper calibration strategy.

Handling

Refer to Sunrise and Sunlight Handling Manual (ANO4947)

IMPORTANT NOTICE

1. Senseair reserves the right to make changes to the information contained in this document without notice. When you consider any use or application of Senseair product stipulated in this document ("Product"), please make inquiries the sales office of Senseair or authorised distributors as to current status of the Products.
2. All information included in this document are provided only to illustrate the operation and application examples of Senseair Products. Senseair neither makes warranties or representations with respect to the accuracy or completeness of the information contained in this document nor grants any license to any intellectual property rights or any other rights of Senseair or any third party with respect to the information in this document. You are fully responsible for use of such information contained in this document in your product design or applications. Senseair ASSUMES NO LIABILITY FOR ANY LOSSES INCURRED BY YOU OR THIRD PARTIES ARISING FROM THE USE OF SUCH INFORMATION IN YOUR PRODUCT DESIGN OR APPLICATIONS.
3. The Product is neither intended nor warranted for use in equipment or systems that require extraordinarily high levels of quality and/or reliability and/or a malfunction or failure of which may cause loss of human life, bodily injury, serious property damage or serious public impact, including but not limited to, equipment used in nuclear facilities, equipment used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and equipment used in finance-related fields. Do not use Product for the above use unless specifically agreed by Senseair in writing.
4. Though Senseair works continually to improve the Product's quality and reliability, you are responsible for complying with safety standards and for providing adequate designs and safeguards for your hardware, software and systems which minimise risk and avoid situations in which a malfunction or failure of the Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption.
5. Do not use or otherwise make available the Product or related technology or any information contained in this document for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). When exporting the Products or related technology or any information contained in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. The Products and related technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Please contact Senseair sales representative for details as to environmental matters such as the RoHS compatibility of the Product. Please use the Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Senseair assumes no liability for damages or losses occurring as a result of noncompliance with applicable laws and regulations.
7. Resale of the Product with provisions different from the statement and/or technical features set forth in this document shall immediately void any warranty granted by Senseair for the Product and shall not create or extend in any manner whatsoever, any liability of Senseair.
8. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Senseair.

www.senseair.com